
MOTORIZED UNCOILER

Motorized Uncoiler is a stand-alone system for tubing in reels, used to feed the tubing into a tube cutter, like our READYcut and EASYcut machines, or for use with an automatic machine (PLC controlled).

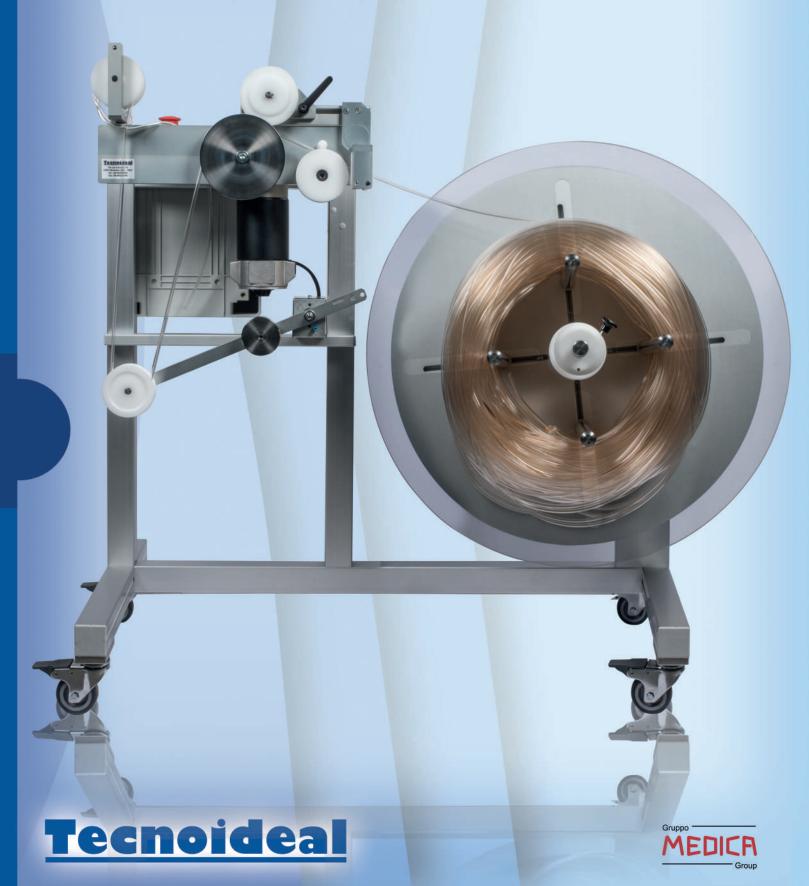

MOTORIZED UNCOILER

The **Motorized Uncoiler** is designed to minimize tube stretching or pulling, guaranteeing consistent cut length. Different diameters (up to 10 mm) can be processed.

The frame is equipped with wheels in order to move comfortably the machine and to have the better versatility in using it. Wheels are equipped with brake.

Manufacturing features, both for quality of materials and reliability of components, ensure suitability for use in clean rooms.

The **Motorised Uncoiler** can work tube reels without spool; on request a special version of coil-holder for reels with plastic core is available.



DIMENSIONS OF REEL THAT CAN BE LOADED:

Inner diameter of reel from 150 to 400 mm

Maximum outer diameter of reel 550 mm (the plate diameter is 600 mm)

Maximum width of reel: 280 mm

Weight reel up to 20 kg

Max tubing line speed: up to 100 m/min

Product code: 98183